


Installation Instruction Manual

Grommet Mount

What's in the bag:

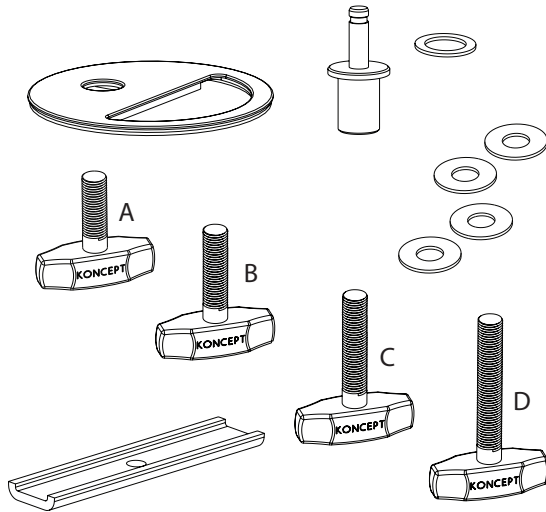


Instructions:

To place the mount over your grommet, measure the thickness of your table, then find your table thickness on the right and follow the instruction illustrations accordingly.


***The maximum recommended grommet hole size is 2.5" (63.5 mm).**

Choose your table thickness:


0.56" to 0.91"

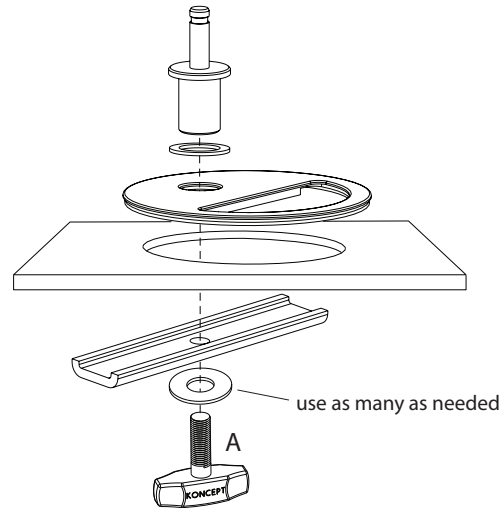


0.79" to 1.3"

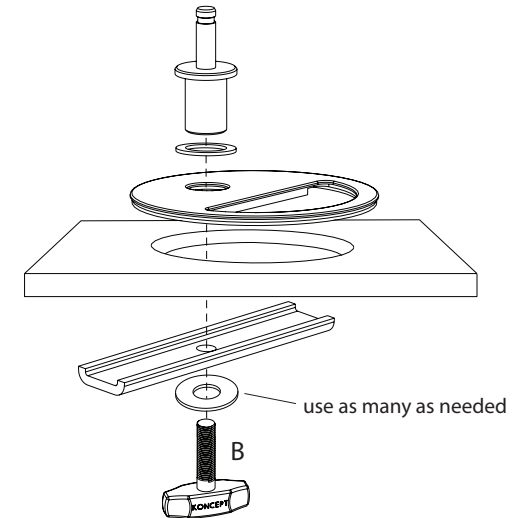

1.19" to 1.7"

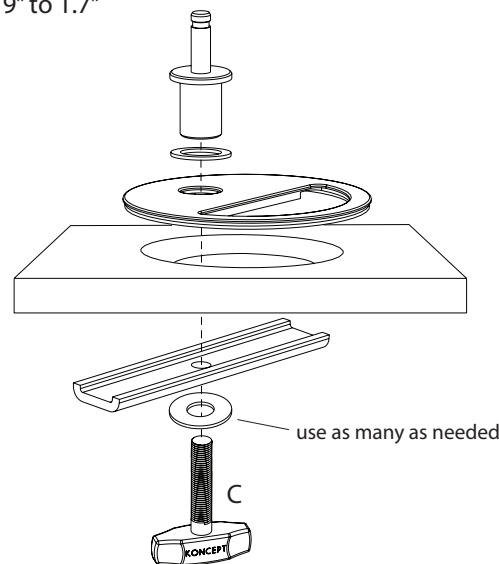

1.58" to 2.09"

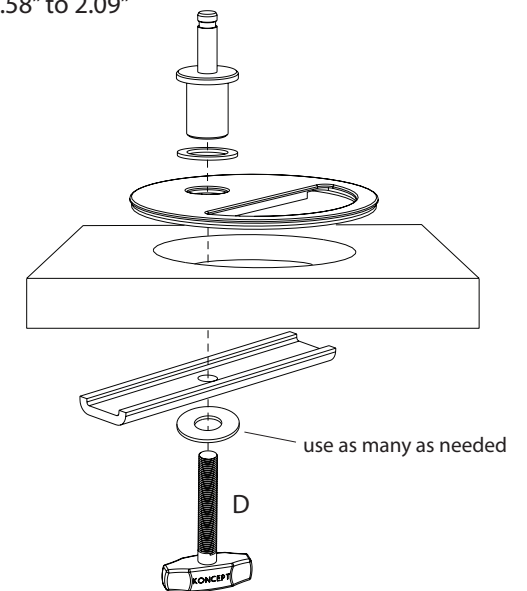

koncept

t: 323.261.8999 | f: 323.261.8998 | www.koncept.com

© 2024 Koncept Inc. All rights reserved.