


1


Attach adhesive foam backing to the light, and then affix two oval fittings.

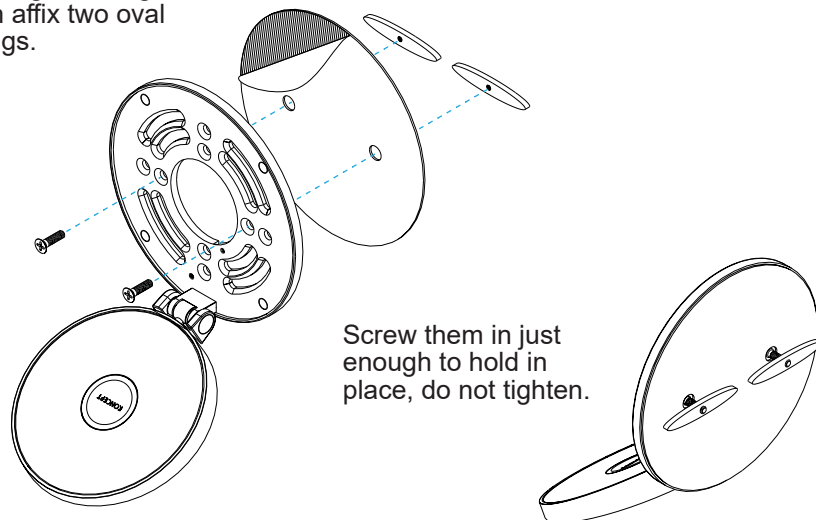

Screw them in just enough to hold in place, do not tighten.


2

Insert the fittings into the slat and push the fixture up against the slat panel.

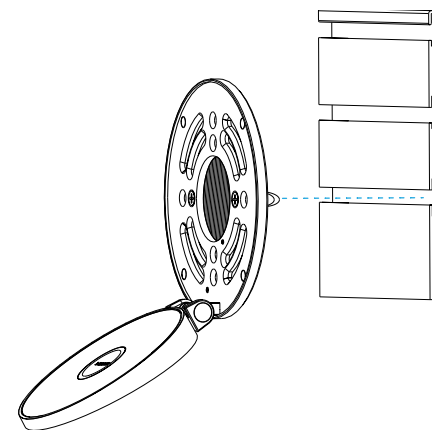

3

Tighten the two screws with a Philips-head screw driver until the fixture is affixed to the slat panel.

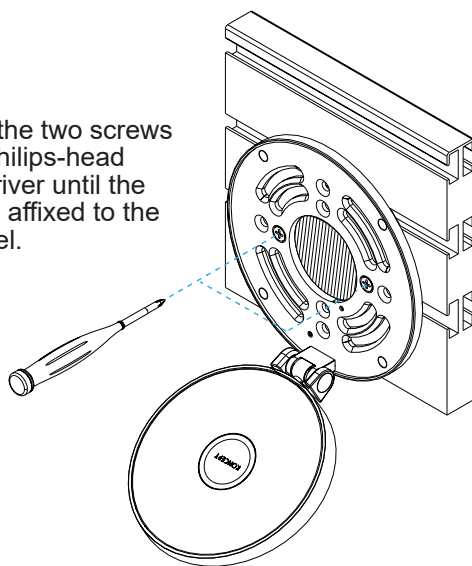

4

Attach the back face plate, and installation is complete.

